

Laboratory / Pilot Plant Equipment D-12 Flotation Machine (VFD)



- 1. General**
 - 1.1 About this Manual
 - 1.2 Transport and Storage
 - 1.3 Equipment Specification
 - 1.4 Customer Service
- 2. Description**
 - 2.1 Product and Warning Signs
 - 2.2 Applications
 - 2.3 Design
 - 2.4 General Arrangement
 - 2.5 Certificates
- 3. Health and Safety**
 - 3.1 General
- 4. Description of Operation**
 - 4.1 Preparation for Operation
 - 4.2 Flotation Operation
- 5. Control System**
- 6. Installation**
 - 6.1 General
 - 6.2 Foundation Requirements
 - 6.3 Motor and Drive
- 7. Operation Instructions**
 - 7.1 Starting and Stopping the Machine
 - 7.2 Alternate Operations
- 8. Care / Maintenance & Alternative Setups**
 - 8.1 Safety Measures
 - 8.2 Suspended Mechanism Spring Adjustment
 - 8.3 Impeller, Diffuser, and Fluidizer Replacement
 - 8.4 Converting Machine to Agitator
 - 8.5 Converting Machine to Attrition Scrubber
 - 8.6 Bearing Replacement
- 9. Spare Parts**
 - 9.1 Recommended Stock of Spare Parts
 - 9.2 Spare Parts Drawing

1. General

1.1 About this Manual

This manual is a part of the equipment to which it relates. It is written for the use of installers, commissioning engineers, operators and maintainers. It should be kept for the life of the equipment and, in case of re-sale, passed on to any subsequent purchaser.

Information contained in this manual is specific to the equipment and is correct at the date of publication. As improvements are continually being made, **Metso Minerals** reserves the right to make alterations to the equipment design and specification, without giving prior notice. Any amendments issued by **Metso Minerals** should be promptly inserted into this manual. © 2013 — **Metso Minerals Industries Inc.** The contents of this manual must not be reproduced without the prior written permission of **Metso Minerals Industries Inc.**

1.2 Transport and Storage

The machine is supplied with a cast iron base complete with motor. All bearings are pre-lubricated before shipment.

When receiving the machine check that all items listed have been supplied and have not been damaged in transit. Loose items such as tanks, vaning plaque, etc., are usually shipped in one or more separate containers.

If damage has occurred, or any items are missing, immediately file a report with the carrier making the delivery. Also, submit a written report to **Metso Minerals** detailing the damage and/or missing items, as soon as possible. Include photos to further explain the issue.

1.2.2 Handling and Lifting

When lifting the unit, make sure to only lift it using the cast iron base or with the supplied lifting eyelet securely affixed to the drive guard stud.

The weight for the complete unit is found under section 1.3.

The unit is bolted to bottom of pallet when initially shipped.

WARNING

MAKE SURE THAT ALL SLINGS, SHACKLES, ETC. USED ARE OF ADEQUATE LOAD CARRYING CAPACITY FOR THE UNIT TO BE LIFTED. CHECK THAT ALL LIFTING EQUIPMENT CERTIFICATES ARE CURRENT.

1.3 Equipment Specification

Machine weight:

87 kg
192 lb

Total weight:

122.5 kg
270 lb

Machine Dimensions (L x W x H):

1016 mm x 610mm x 991mm
40in x 24in x 39in

Total Crate:

1219mm x 610mm x 1042mm
48in x 24in x 41in

Machine Speed (rpm/min):

(Legacy 60 Hz) 800—3200
(Legacy 50 Hz) 660—2650
(VFD) 580—3500

Motor:

(Legacy) **USA**
1/2 HP, 1800 rpm, single-phase
60 Hz, 115 / 230 Volt
TEFC, ball-bearing motor

(Legacy) **Non -USA**
1/2 HP, 1425 rpm, single-phase
50 Hz, 110 / 220 Volt
TEFC, ball-bearing motor

(VFD)
1/2HP, 3500 rpm, three-phase
60 Hz, 208-230 / 460 Volt, 56 Frame
TEFC, ball-bearing motor

1.4 Customer Service

For information regarding service & repair of Metso laboratory machines, please contact the closest Metso office. To receive information on where to find the closest office, contact one of the headquarters listed below:

Legend, Inc.

988 Packer Way
Sparks, NV 89431
USA

Tel: (+1) 775 786 3003
Fax: (+1) 570 275 678
Email: ss@lmine.com

Please provide the following information:


- 1 - Model and machine size
- 2 - Serial number
- 3 - Approximate date of purchase
- 4 - Request details, visible errors and more.

2. Description


2.1 Product and Warning Signs

2.1.1 Product Signs

All product signs attached to the machine are shown below.

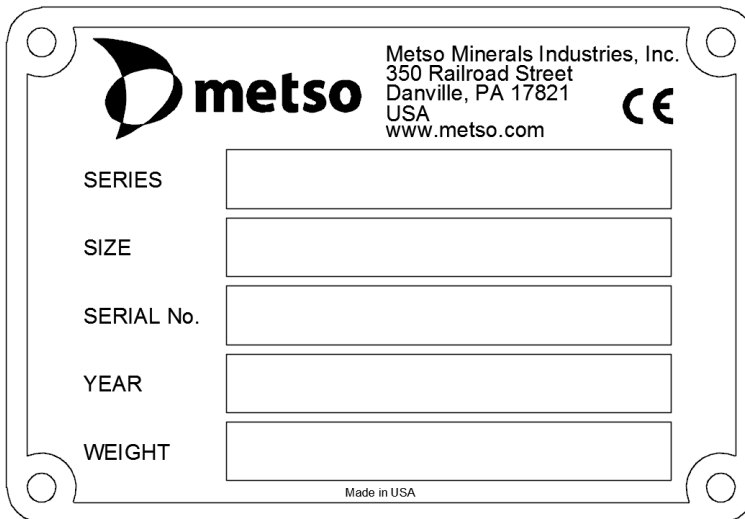

The image shows a rectangular metal plate with rounded corners and four mounting holes. It contains the Metso logo, company address, website, and CE mark. Below this information are five horizontal input fields for machine specifications.

 metso	Metso Minerals Industries, Inc. 350 Railroad Street Danville, PA 17821 USA www.metso.com	CE
SERIES	<input type="text"/>	
SIZE	<input type="text"/>	
SERIAL No.	<input type="text"/>	
YEAR	<input type="text"/>	
WEIGHT	<input type="text"/>	
Made in USA		

A machine sign containing information as above is affixed to the machine base.
Equipment delivered with a motor has a machine sign with CE-mark.

2.1.2 Warning and Caution Signs



This sign is fitted to the belt guard. The guard should always be fitted when the machine is in operation. If the guard is to be removed, check that the motor is disconnected from the mains or that the main switch is turned off and locked so that the motor cannot be started inadvertently. The guard must always be refitted before the motor is started.



These signs are fitted to the guard at the lifting hooks. The hooks are **only** meant for lifting the guards!



Due to the risk of high noise levels and danger of dust from the activation chamber you should wear ear and eye protection.




Crush hazard. Do not insert tools or other foreign objects into crushing chamber when the machine is operating.

Depending on type of material, it could be a potential risk of material being thrown out of the chamber. Do not look into the chamber when the machine is operating.



Crush hazard. Keep hands clear from moving parts!

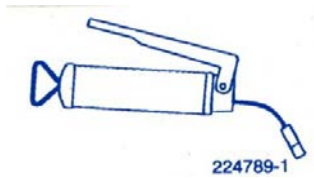

This sign, attached to the machine, indicates that the machine requires periodic greasing.

2.2 Applications

This equipment is designed to test flotation scenarios. This machine will allow small batch tests to determine air required, possible mixtures, and concentrations to produce the best separation efficiency of material in the laboratory and small pilot plants. This information can then be used to possibly enhance a larger scale operation.

2.3 Design

2.3.1 General

These machines can also be used as agitators or attrition scrubbers with the addition of an optional kit.

The Model D-12 machine is used for 250, 500, 1000, and 2000 gram tests.

One 1000 gram acrylic tank is furnished with each machine.

The other tanks (250, 500, 1000, and 2000 gram) are stainless steel.


Each machine consists of the following: cast iron base, aluminum supporting column and arm; suspended type mechanism with totally enclosed anti-friction spindle bearing, stainless steel shaft, stainless steel standpipe with air control valve, removable polyurethane diffuser and polyurethane receded disk impeller, drive guard, rubber base mat, (*Motor See Section 1.3*), belt drive, white enamel vanning plaque, Hydrion pH indicator, set of sample reagents, small hand magnet, and acrylic plastic, recirculation collar (fluidizer). A switch mounting box & toggle switch (legacy models), variable frequency drive & emergency stop (VFD models), and cable with plug are furnished with each machine for connecting electrical power to the machine.

For both legacy and VFD model machines we offer a stainless steel attrition scrubbing kit (consisting of: lower spindle bearing cap, one-piece double attrition propeller, and tank with splash cover) for attrition scrubbing tests; and an agitation kit (consisting of lower spindle bearing cap, single agitator propeller, a glass tank) for agitation tests. Additional 250, 500, 1000, and 2000 gram stainless steel tanks and 1000 gram acrylic tanks are available if required.


The suspended type mechanism is spring-balanced and is easily raised or lowered with the hand crank on the side of the machine. The mechanism can be locked in any vertical position with the spring-loaded locking pin on the side opposite the hand crank. This pin must be pulled out and held when operating the hand crank. When the desired position is reached, release the pin, and it will lock the mechanism in place.

Detailed Parts In Kit:

Base Flotation Kit:

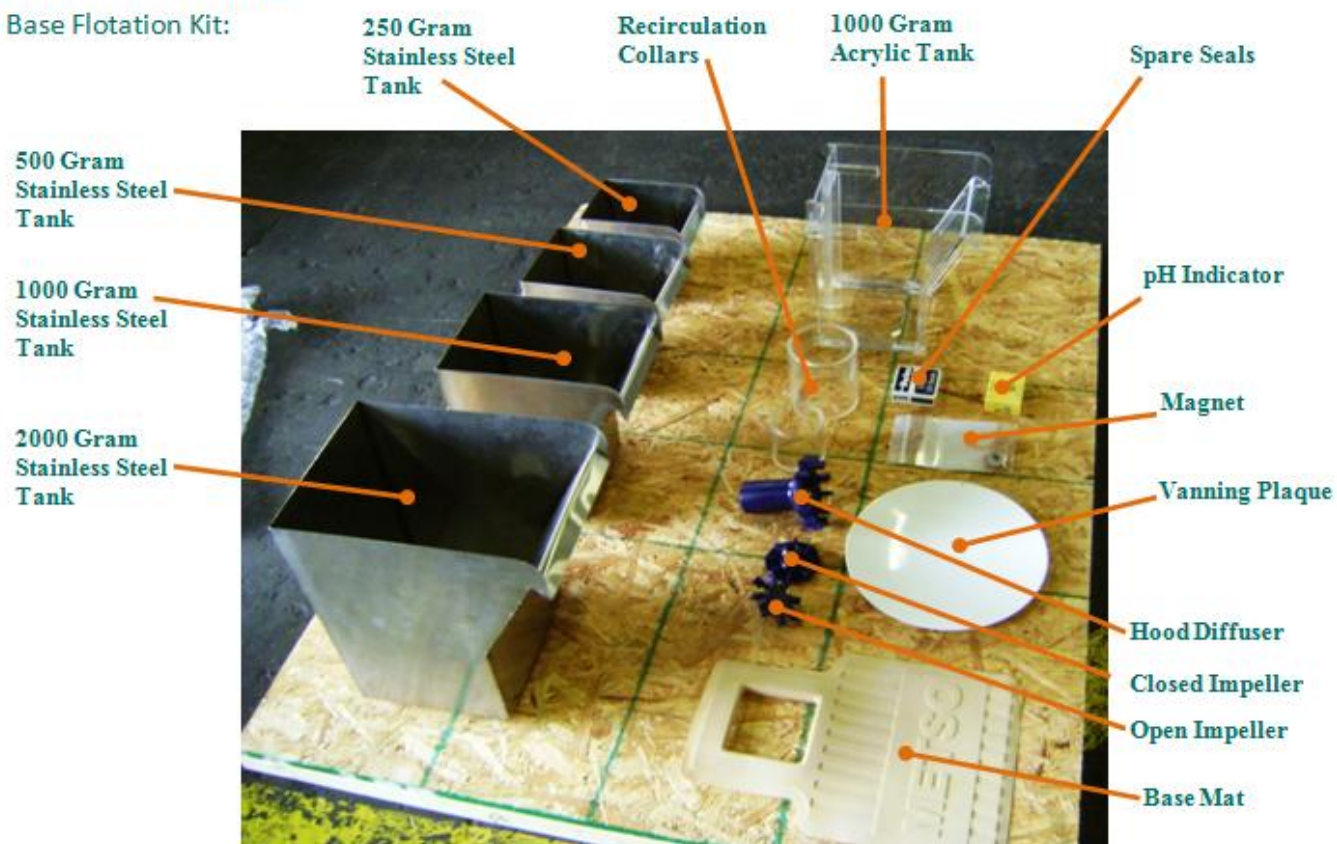


Attrition Scrubber Kit:

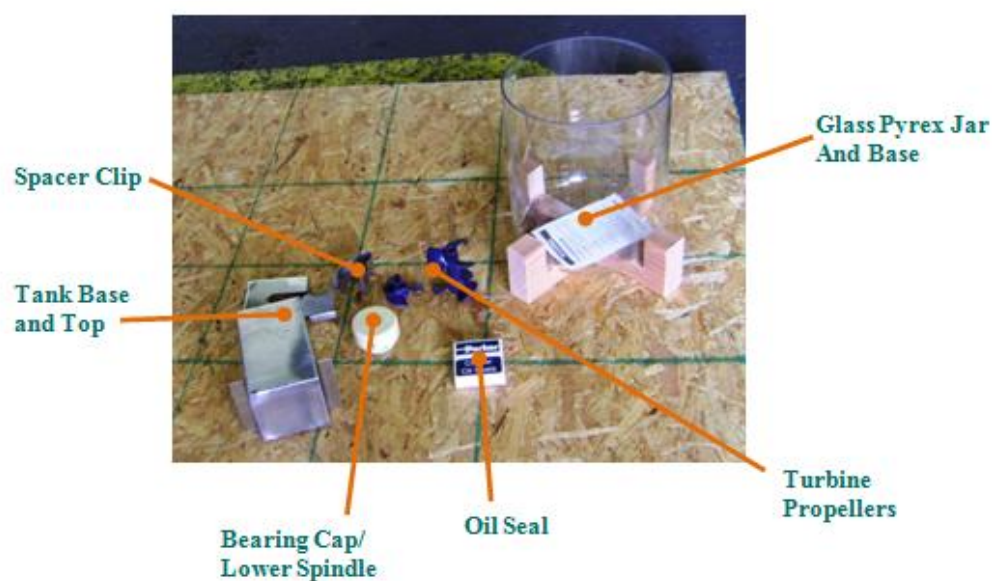


2.3.2 Noise Level

The noise level (Lpa) for the machine is measured to **60.7dBA** when idling; the noise level for the machine is dependent on the material being mixed.

2.4 General Arrangement

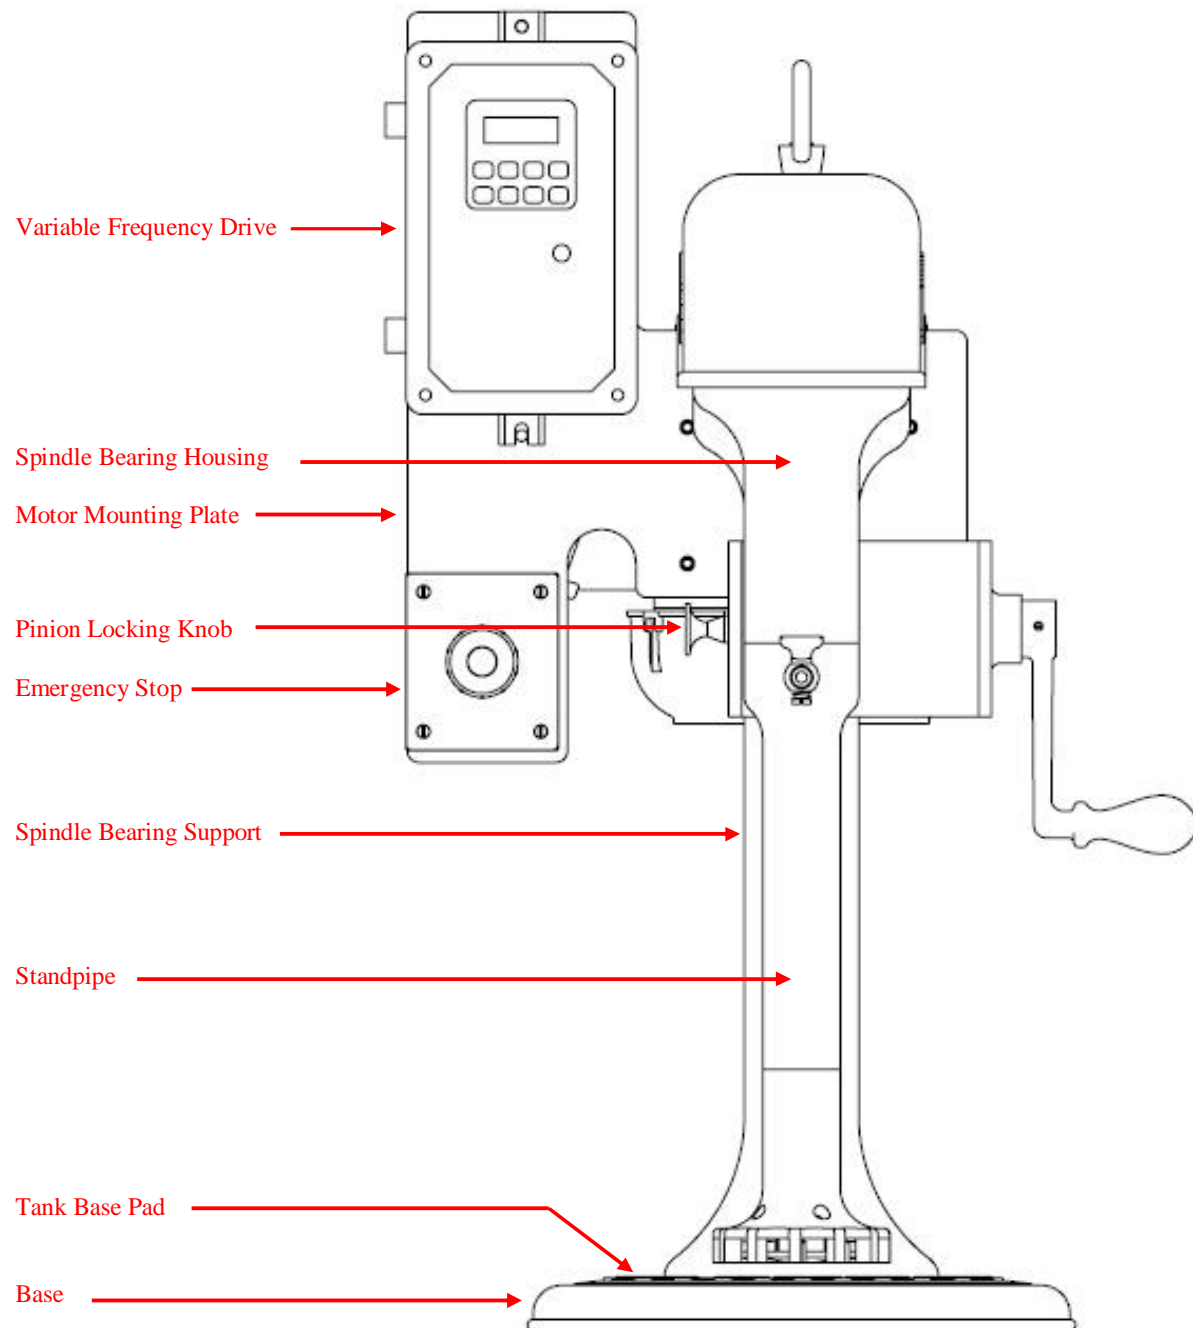

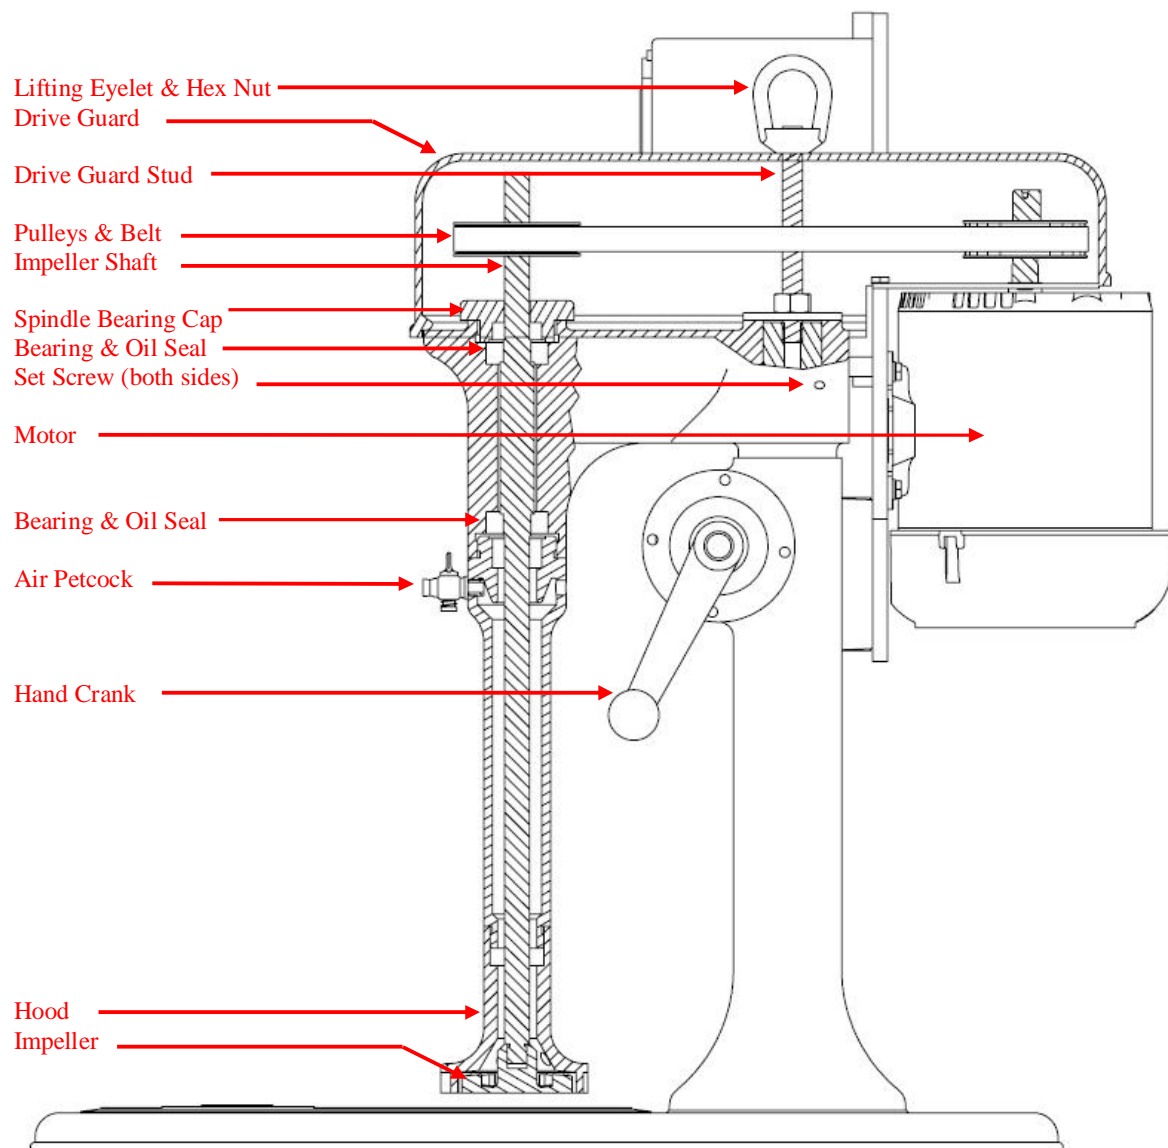

2.5 Certificates



DECLARATION OF CONFORMITY

ORIGINAL

Business Name and Full Address of Manufacturer

Metso Minerals Industries Inc. - 350 Railroad Street
 Danville
 PA 17821-2046 USA

Name and Address of Authorised Representative

Promark Associates Ltd - 17 Normandy Way,
 Fordingbridge
 Hampshire
 SP6 1NW

Name and Address of the Person in Community Authorised to compile the Technical File (If different to above)

TUV SUD Product Service - Belasis Business Centre,
 Coxwold Way
 Billingham
 TS23 4EA

Description of product (Commercial Name)
Function, Model, Type, Serial Number

Function: Model: D-12
 Serial No: P8017411
 Type: Flotation Machine

Standards Used

BS EN953- + A1 2009 1997, BS EN ISO 12100 2010, BS EN ISO13849-1 2008, BS EN ISO 13850 2008, BS EN ISO 13857 2008, BS EN ISO14121-1 2007, BS EN55011- + A1 2010 2009, BS EN60204-1 + A1 2009 2006, BS EN61000-4-2 2009, BS EN61000-4-4 + A1 2010 2004

Place of Declaration

350 Railroad Street
 Danville
 PA 17821-2046 USA

Date of Declaration 19 November 2014

Declaration

 
I declare that the machinery fulfils all the relevant provisions of the following Directives:-
 Machinery Directive 2006/42/EC, Low Voltage Directive 2006/95/EC, Electromagnetic
 Compatibility Directive 2004/108/EC.

Person Empowered to Draw Up Declaration

Name: Robert Mackrell

Position: Managing Director

Signature:




Declaration No: 75924316-D12

3. Health and Safety

3.1 General

HEALTH AND SAFETY STATEMENT

DO TAKE TIME TO ENSURE THAT YOUR SAFETY AND THAT OF OTHERS IS NOT PUT AT RISK. FAILURE TO OBSERVE CERTAIN ELEMENTARY SAFETY PRECAUTIONS MAY RESULT IN PERSONAL INJURY OR DAMAGE TO THIS EQUIPMENT. THE SAFETY INFORMATION IN THIS AND OTHER SECTIONS IS INTENDED TO ENCOURAGE A SAFETY CONSCIOUS APPROACH WHILE OPERATING AND CARRYING OUT MAINTENANCE.

3.1.1 Warnings and Cautions

For the purpose of definition in this manual, a **WARNING** gives information, which if ignored, could lead to serious injury of personnel. A **CAUTION** gives information, which if ignored, could lead to serious damage to the machine or associated equipment.

WARNING

PARAGRAPHS WHICH PURELY PROVIDE A WARNING NOTICE ARE BOXED AND HIGHLIGHTED IN THIS STYLE.

CAUTION

PARAGRAPHS WHICH PURELY PROVIDE A CAUTIONARY NOTICE ARE BOXED AND HIGHLIGHTED IN THIS STYLE.

3.1.2 Training

It is strongly recommended that all customers' production, maintenance personnel, and site visitors are made fully aware of the potential dangers of this equipment. If any doubt exists, please contact Metso for advice.

FOR YOUR OWN PERSONAL SAFETY, READ AND TAKE NOTE OF THE FOLLOWING:

Hazardous areas:

These are in the areas of the flywheels and V-belt drive. Under normal operating conditions these areas **MUST** be enclosed by safety guards. Other hazardous areas are the agitation area; for practical reasons, these areas are not enclosed by covers. For your own safety, you should **NEVER** put hands or fingers into the agitation area without first ensuring that the power is disconnected and secured.

Lifting the machine:

Make sure that ALL slings, shackles, etc. are of adequate load carrying capacity. When lifting the complete unit it has to be moved by the cast iron base or by supplied lifting eyelet affixed to the drive guard stud. Use caution; observe that the weight distribution will not be equal.

Operating the machine:

Ensure that ALL safety covers and guards are in position and securely fitted. This equipment must **not** be modified and/or used for duties, processes, materials, etc., other than that receiving approval from Metso Minerals. Failure to adhere to this warning may result in equipment damage and/or unsafe working conditions, resulting in serious personal injury.

Servicing the machine:

SWITCH OFF and ISOLATE the electrical supply to the machine motor and allow rotating parts to come to rest before carrying out any maintenance or adjustments.

Do NOT substitute replacement parts without the approval of Metso Minerals. Parts substitution can result in equipment damage and unsafe working conditions resulting, in serious personal injury.

4. Description Of Operation

4.1 Preparation for Operation

While there is little chance of contamination when using the flotation machine, the machine should be thoroughly cleaned between tests to avoid this possibility. The suspended type mechanism and separate tanks lend themselves to easy and complete cleaning.

If ample precautions are taken, the weighed products from the test should check close to the original weight of the sample introduced into the cell. Should the weights not check the trouble should be investigated.


In many cases, certain ores and products are partially soluble or may contain a slight moisture content which accounts for such variations. All operations prior to and after the flotation step should be handled with equal care, if an accurate balance is to be obtained.



Drying, for example, should be watched carefully to insure complete moisture removal and avoid overheating. Preparations of the various test products after drying and before obtaining chemical analysis, should be carefully performed. This phase of the test program is sometimes underestimated or neglected.

D12 Lab Flotation Machine

Quick Start Guide

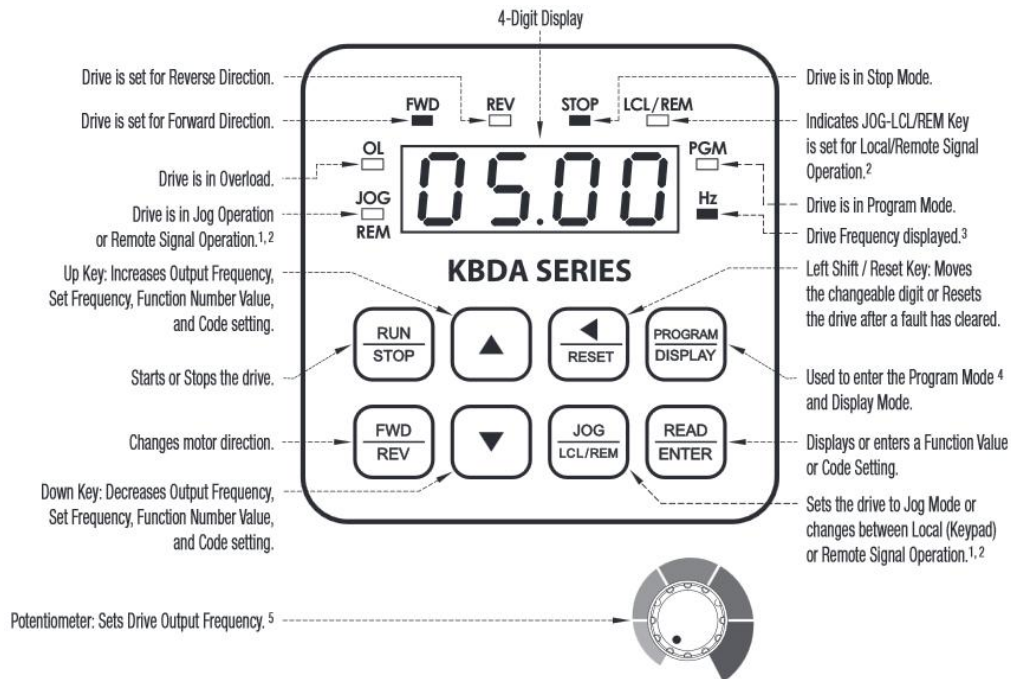Keypad Layout with Main Speed Potentiometer



- 1.) Plug D12 into power supply. If the Variable Frequency Drive (VFD) does not turn on, make sure the emergency stop button is reset by twisting it counter clockwise.
- 2.) Flip the VFD toggle switch (if equipped) to ON. The display will blink "Stop".
- 3.) Keep clear of moving parts. Press  to start the D12.
- 4.) Set the desired speed using the Potentiometer. Turn clockwise to increase RPM.
- 5.) Press  again to stop the D12 under normal operating conditions.
- 6.) Should the emergency stop be activated while the D12 is running, the display will blink "-LU-". To resume normal operation, twist the emergency stop button clockwise to reset it. The display will now blink "LU-r".

Next, press  to reset the VFD. Now, the display will flash "Stop".

Proceed to Step 3 to resume operation.

Note: The VFD screen will take a few moments to discharge once turned off or unplugged. This is normal.

4.2 Flotation Operation

The Model D-12 machine is usually set up for the 2000 gram tests and must be changed in order to perform the 250 to 1000 gram tests. To change the Model D-12, replace impeller and diffuser on machine with the impeller and diffuser shipped loose (see Section 8: **CARE / MAINTENANCE & ALTERNATE SETUP**).

The following paragraphs give a brief outline of several important factors having a marked influence on flotation technique and results.

When performing tests, it is necessary to use the utmost care in keeping accurate records of all conditions present during the test which might influence the results or be of importance in interpreting the test data. If proper care is exercised, duplication of results is assured in an operating plant.

SPEED ADJUSTMENT

Legacy

Speed of the machine is adjusted by turning the knob located directly above the motor and connected to the variable speed sheave. To increase speed, turn the knob counterclockwise. To decrease speed, turn the knob clockwise. Adjust speed only when machine is running.

VFD

Speed of the machine is adjusted by turning the potentiometer located directly on the Variable Frequency Drive. To increase speed, turn the knob clockwise. To decrease speed, turn the knob counterclockwise.

The nominal speed required for each test is a factor within the control of the operator who, by observation, will quickly determine the proper speed for each operation. Machines furnished with tachometers are ideal for obtaining nominal speed during specific tests and can be used in setting speeds for comparative tests. Normal operating speeds are as follows:

250, 500, or 1000 gram tests: *Approximately 1300 rpm*
2000 gram tests: *Approximately 1200 rpm*

HEIGHT ADJUSTMENT

To adjust the height of the machine, pull the pinion locking knob out while simultaneously rotating the hand crank. Counter clockwise raises; clockwise lowers. Release the pinion locking knob when the desired height is reached.

AERATION CONTROL

The machine induces its own air so it is not necessary to have an external air source. However, pressurized air can be added if desired.

The air valve at the top of the standpipe is used for aeration control during the aeration and flotation operation. The valve is closed during conditioning and opened during the aeration and flotation period.

USE OF PLASTIC RECIRCULATION COLLAR (FLUIDIZER) FOR FLOTATION

The holes in the diffuser on the lower end of the standpipe permit recirculation of pulp to the impeller, enhancing the aerating and mixing characteristics of the flotation machine.

However, recirculation of low density pulp from the upper zone of the cell into the denser zone at the bottom of the cell is often desirable. This is particularly true for coarse or de-slimed feeds, as the fluidizing action created by recirculation of pulp from the upper zone of the cell minimizes stratification of sands, improving flotation results.

The fluidizer furnished with each machine is used for upper-zone recirculation. Refer to Section 8 (CARE / MAINTENANCE & ALTERNATE SETUPS) for installation of the fluidizer. After the fluidizer is installed, it may be left on the machine. When the fluidizer is not needed for a test, it can be raised out of position and hung on the air valve using a small piece of wire. This makes it unnecessary to dismantle the machine each time the fluidizer is needed or not needed for a test. Also, comparative tests with and without the fluidizer can be conveniently performed or the principle advantage of upper recirculation can be readily determined.

OBTAINING THE SAMPLE AND GRINDING

The sample should be representative of the anticipated feed for commercial flotation since all laboratory results will pertain to the flotation characteristics of the test sample. A discrepancy in the material can lead to erroneous conclusions, thus effecting the interpretation of the results. If drying is necessary, great care should be exercised to avoid unnecessarily high temperatures or prolonged heat.

The same method should be used for grinding as will be used in practice. That is, if wet grinding is to be used, that method should be used in testing. Another important factor is water; water from the same source, and at about the same temperature should be used in testing as will be used in the mill. While these points may be considered as refinements, it will be found that they will be of help in arriving at correct conclusions. The use of mine water should be avoided as much as possible, due to probable acidity and soluble salt content.

FINENESS OF GRIND

The degree to which a certain ore must be ground to secure a satisfactory extraction of a mineral depends upon the physical characteristics of the ore.

Generally, the largest particle which can be floated commercially is **minus 20-mesh**, although a much coarser particle size may be circulated while floating the usually finer mineral values. Naturally, the coarsest grind in which the mineral is liberated from the gangue should be determined, and thus a savings in power and grinding media will result.

A better extraction will be made if the ore is not over-ground. Tests should be made first at a coarse mesh, saving as much as possible at this size; the tailings should then be reground for further tests to liberate the remaining values. It pays to remove the mineral as soon as liberated.

KIND AND QUANTITY OF REAGENTS

It is impossible to specify the reagents which will give good results on any ore. Many articles are published on reagents used on certain ores, but these can only be used as a guide; each ore has certain characteristics that can only be determined by test work. *Refer to a reagent handbook which describes most of the common flotation reagents available, their uses, and their characteristics. Literature available from reagent manufacturers is also helpful.*

METHOD OF FEEDING

The quantity of reagent required is usually very small. It may, however, be found that the laboratory machine requires slightly more reagent than will be used in practice. The previously referenced handbook lists the usual quantities of specific reagents used in flotation. Liquid reagents should be introduced in the flotation cell drop by drop using an eye dropper. Water soluble dry reagents, made up as a 1-percent solution, should be added with a graduate or pipette. All reagent quantities should be recorded as part of the test data. It is usually desirable to temporarily close the air valve while adding reagents, enabling a more thorough mixing of the reagent and pulp to be attained.

CONDITIONING

Conditioning is the time which the reagents must be in intimate association with the pulp in order to exert their full effect--prior to flotation. In practice, the reagents may be added to the ball mill (or at some intermediate point in the mill circuit) thus allowing sufficient time for the reagent to take effect. In other instances, conditioning tanks with mechanical agitators are required for a longer conditioning period. The length of time (usually in the range of 5 to 15 minutes) can usually be determined in a laboratory machine by observing the time required after the addition of reagents and until a good froth appears. During this time, air may or may not be admitted through the air valve and the machine may be operated at a lower speed. During the conditioning period, it is sometimes advisable to have a pulp dilution of about 50-percent solids. After the reagents are thoroughly mixed, additional water is added and the air is controlled by the test engineer as required. The conditioning time should be recorded as a vital part of the test procedure.

HYDROGEN ION CONCENTRATION (pH)

The pH scale is used to denote the acidity or alkalinity of the ore pulp. In general, the best flotation conditions exist when the pulp is slightly alkaline; in some cases it may be undesirable or uneconomical to use an alkaline circuit. Likewise, there are certain minerals that float much more readily in an acidic solution of pulp. In this instance, an acid circuit should be used. The pH indication should be recorded during the test. When flotation is to

be conducted in an alkaline circuit, the reagent (usually soda ash or lime) is added to the batch grinding mill.

DILUTION

Dilution is the ratio of water to solids in the pulp. Thus, 4:1 would indicate four parts water to one part dry solids, by weight. This can also be expressed as 20-percent solids. Coarse flotation will require a higher pulp density than will be necessary if the ore is finely ground.

For example, a condition where approximately 6 percent of the solids are retained on a 65-mesh screen, with 60 percent passing a 200-mesh screen, would indicate a pulp density of 2:1 or even 3:1 for good results. Where 25 percent of the solids are retained on a 48-mesh screen with 35 percent passing a 200-mesh screen, the pulp density would be approximately 1:1.

These examples show the wide range of pulp densities sometimes encountered and illustrate that a coarse grind requires less water than when the ore is ground finer. These high pulp densities are frequently used in the Sub-A Unit Cells when they are installed in the ball mill-classifier circuit. Table 4-1 lists the approximate tank volumes of the tanks supplied with the laboratory flotation machines.

Table 4-1 Approximate Tank Volume

Tank Size (g)	Machine Running & Air On			
	Less Mechanism	Full	1" below lip	2" below lip
250	1,710 cc	1,235 cc	970 cc	610 cc
500	3,230 cc	2,550 cc	2,000 cc	1,630 cc
1000	5,780 cc	4,980 cc	4,300 cc	3,520 cc
2000	10,712 cc	9,327 cc	8,057 cc	6,927 cc
Dry solids weight, 2.7 Specific Gravity, At approximately 20% Solids				

FLOTATION TIME

A factor which governs the number of cells required in practice to treat a certain ore is the flotation contact time. In the laboratory, the pulp will be held in the machine until all the desired mineral has been floated. The froth concentrate is removed by skimming the froth with a hand paddle fabricated from wood or plastic. In most cases, the skimming should be performed at a uniform rate. This rate will normally be in the range of 5 to 20 minutes. The time will vary greatly with different ores and should be recorded as part of the test data. This time element can be determined in the laboratory. Knowing the retention time and the pulp density, it is possible to select the best size and number of flotation cells required for the commercial installation to handle a given tonnage of crude ore per day.

Laboratory flotation work can involve a single flotation step to produce a rougher concentrate and tailing or can consist of multiple concentrates or intermediate products.

Regrinding or de-sliming can also be a part of the procedure. It is impossible to cover this subject in detail here. Cleaning of the rougher concentrate is normally required to reject certain quantities of impurities that floated with the desired material. Cleaning is essentially only re-flotation of the rougher concentrate with or without additional quantities of reagents. The rougher flotation concentrate will be produced in the 1000- or 2000-gram tanks and is usually cleaned at a lower pulp density than the rougher flotation, using the 250- or 500 -gram tank. In some cases, the impurities are floated away from the desired product so that the tailing is actually the enriched product. As a general rule, it is preferable to float the component that is of the smallest weight, but this cannot always be done.

In practice, flotation is not carried out in one large cell, but in a series of cells (preferably four or more) which divides the time necessary for flotation by the number of cells used. The largest number of cells in series gives not only more actual retreatment of the pulp (thereby avoiding short circuiting), but also permits using cells for either roughing, cleaning, or re-cleaning purposes essential in making the high grade shipping product.

SUMMARY

From the preceding instructions, you will note that the laboratory flotation machine can be used to duplicate all the operations in large scale commercial flotation, such as, the conditioning of the pulp with reagents, the aeration of the pulp, and the production of the high grade mineral froth which can be removed at definite time intervals. The results obtained in testing can be compared to actual operating practice. If you have any questions, Metso maintains a staff of metallurgists who will work closely with you to solve all problems. All inquiries and metallurgical results are held in strict confidence.

5. Control System

A typical across the line starter should be used. This can be done many ways but the most common is to use a switch which is rated for the motor size. The switch will simply connect the motor to a single phase circuit. In small size motors a heavy duty switch can just be wired to power.

Some units have the VFD option (see below). In these cases the pulley system is not used to control speed, the actual speed of the motor is changed. The VFD is the master start/stop and speed control. It is energized with 120 or 240 Volt single phase power and outputs 240 V three phase to the motor.



6. Installation

6.1 General

Follow local health and safety regulations. Use certified lifting equipment. The weight of the machine, excluding motor and drive, is found under "Equipment Specification" Section 1.3, as well as on the product sign on the machine. If the machine is supplied with motor and drive, the total weight will be stated on the sign. Check the lifting equipment's capacity against the weight of the machine, motor and drive.

Electrical installation must only be performed by an authorized electrician

Install the flotation machine as follows:

- a.) Place machine on table or bench.
- b.) Clean all dust, salt deposits, etc., from machine.
- c.) Level machine with leveling screws in base of machine.
- d.) D-12 machines are prewired with toggle switch (if equipped) and cable with plug wired for 115vac, single phase. If 230vac single phase power is to be used, toggle switch and cord must be removed and suitable wiring and a fusible disconnect switch installed.

CAUTION

TO PREVENT POSSIBLE DAMAGE TO MOTOR OR MACHINE, ENSURE ELECTRICAL POWER SOURCE CONNECTED TO MOTOR IN STEP D CORRESPONDS WITH ELECTRICAL POWER REQUIREMENTS FOR MACHINE MOTOR. ENSURE MOTOR DIRECTION OF ROTATION IS SUCH THAT MOTOR WILL DRIVE IMPELLER IN A CLOCKWISE DIRECTION WHEN LOOKING DOWN ON THE IMPELLER.

6.2 Foundation Requirements

D12 Flotation machines are shipped with cast iron bases that are easily bolted to a tabletop or foundation. Be sure that the machine base is firmly placed to prevent vibration during operation.


6.3 Motor and Drive

WARNING

BEFORE CARRYING OUT ANY MAINTENANCE ENSURE THAT ALL ELECTRICAL SUPPLIES TO THE MOTOR AND ASSOCIATED EQUIPMENT ARE SWITCHED OFF AND ISOLATED. LOCK IN THE OFF POSITION OR ATTACH SUITABLE WARNING PLATES TO THE RELEVANT SWITCHES.

Installation of the motor on the motor plate

The motor plate is prepared for a motor size according to NEMA 56. The stand is equipped with four bolts (#1) which the motor is mounted on (only 2 are visible in picture below). The stand also has the function of tensioning the belt. The belt is tensioned or slackened by adjusting the tensioning bolt (#2). Note the set screws on both sides of the spindle bearing (#3), these must be loosened prior to adjustment and then retightened.

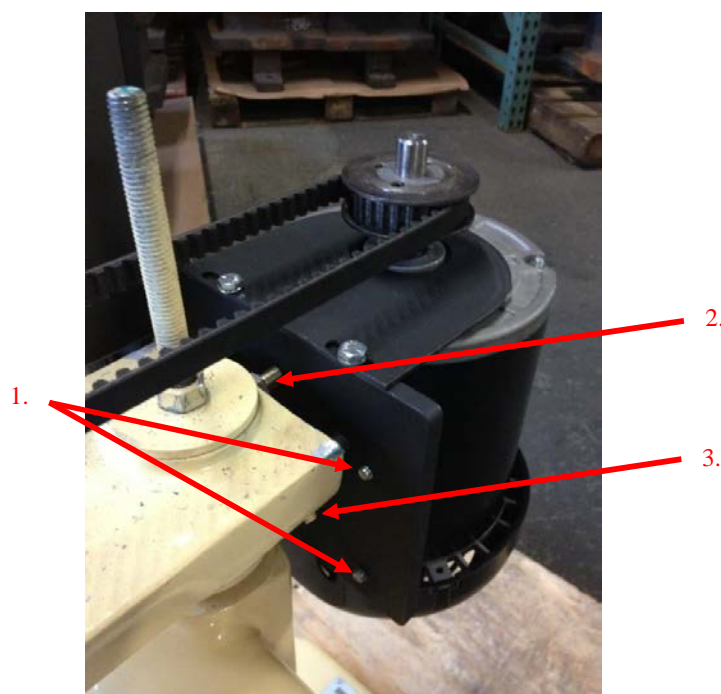

VFD Model



Legacy Model

Legacy Models:


NOTE: On the constant speed motor V-belts do not require tensioning.

This will be taken up by the variable speed pulleys.


Use an authorized electrician to connect the motor to the power source according to the motor supplier's recommendation.

For fixed speed motors, wire 6 wires to connect:


Low Voltage (110 Volt)

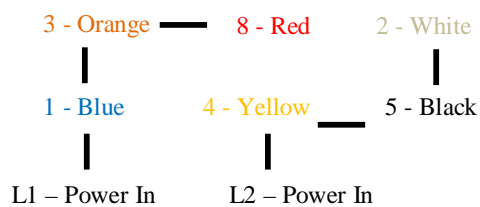

High Voltage (220 Volt)

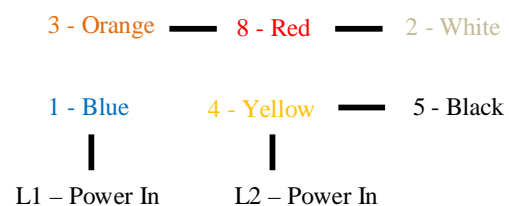

Interchange 5 & 8 wires to reverse rotation:

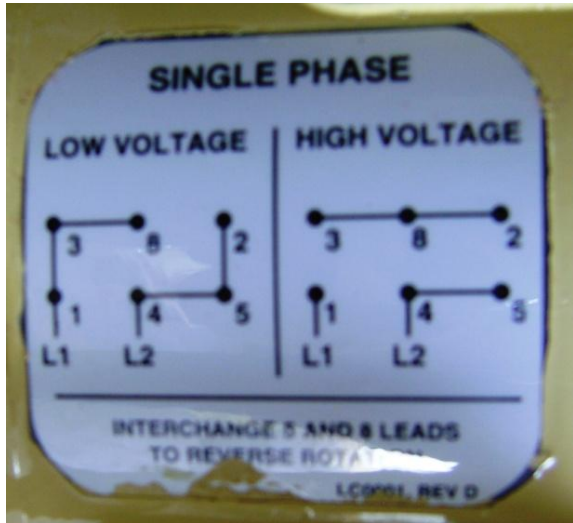


General Electrical

- All electrical equipment must be grounded.
- Always pull main switch before disconnecting plug from receptacle.
- Never perform greasing, adjusting or repair of machine without cutting off and padlocking all power.
- Use only the proper size and style of fuses or breakers.
- Keep electrical cables in good condition at all times and keep them out of standing water.

Assembling the motor pulley

The belt drive requires a precise adjustment to transfer the installed power and give as little wear as possible to the drive.

- Clean and degrease the shaft, taper lock, pulley and pulley grooves
- Fit the pulley and taper-lock together.
- Assemble the pulley and taper-lock unit on the shaft and align the unit in the required position. Check the position of the motor pulley against the machine pulley using a straight edge.

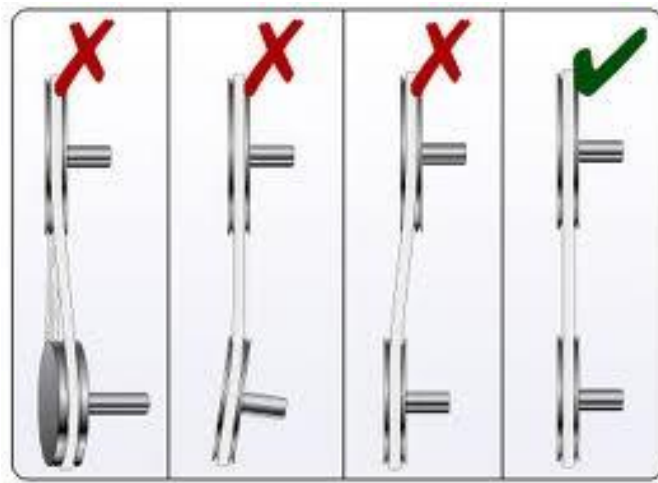

Assembling the Belt

In the production of belts, some manufacturers classify belts by different length tolerances. It is therefore important to ensure that the belts of a given drive all have the same length tolerance.

Guard Removal and Replacement

The guard is held on by a single hex nut. Therefore it can be loosened or removed to take the guard off.



Motor Rotation Test

The motor rotation does not need to be checked. The machine will run in the proper direction.

D12 Lab Flotation Machine KBDA-24D Variable Frequency Drive Setup

WARNING! HIGH VOLTAGE -


Disconnect main power before making connections.

Terminals "L1" and "L2" are for single phase AC line input only. Jumper "J1" should be set to the 115V position for use with a 115V power supply. For use with a 230V power supply, move jumper "J1" to the 230V position.


RECONDITIONING THE BUS CAPACITORS

If this drive has been in storage for over one year it is necessary to recondition the power supply bus capacitors. To recondition the bus capacitors, apply the AC Line, with the drive in the Stop Mode, for a minimum of one hour. Not following this procedure will cause the bus capacitors to fail.


(A40194) – Rev. A00 – 7/31/2013

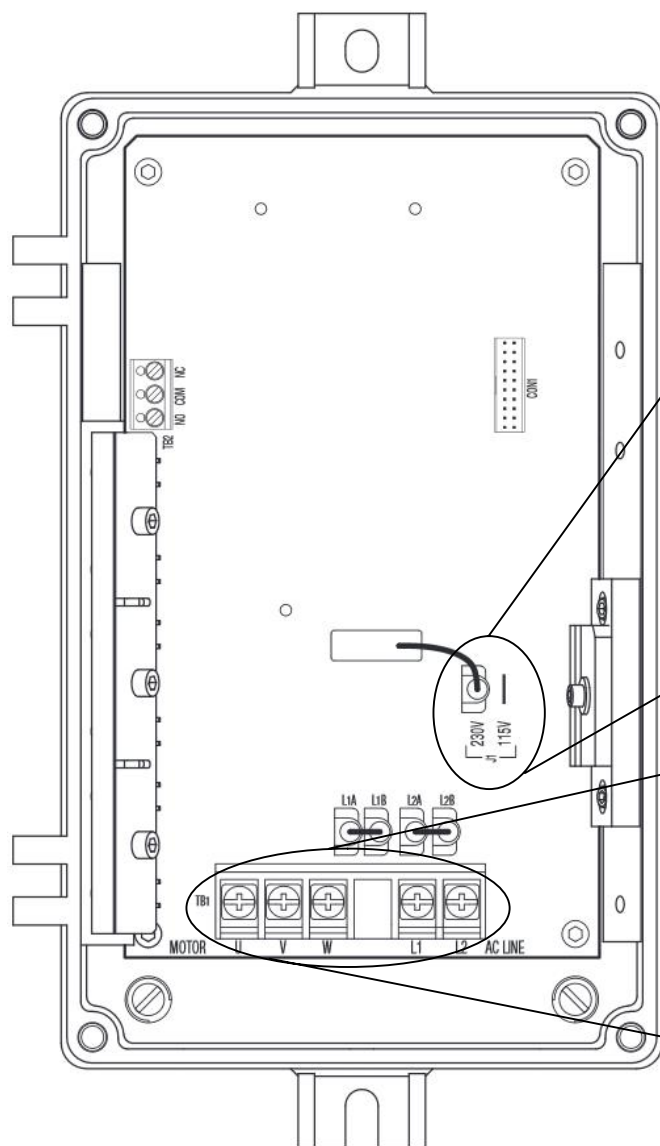


208/230 Volt AC Line Input
(J1 Installed on Terminal "230V")
(Factory Setting)

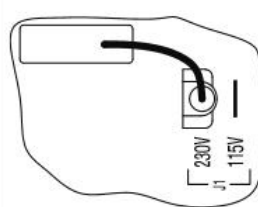


115 Volt AC Line Input
(J1 Installed on Terminal "115V")

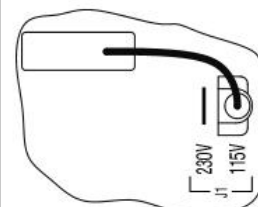


AC LINE INPUT, MOTOR, AND GROUND CONNECTIONS

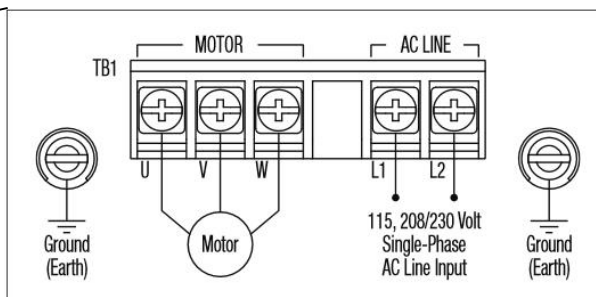

Keypad Layout with Main Speed Potentiometer

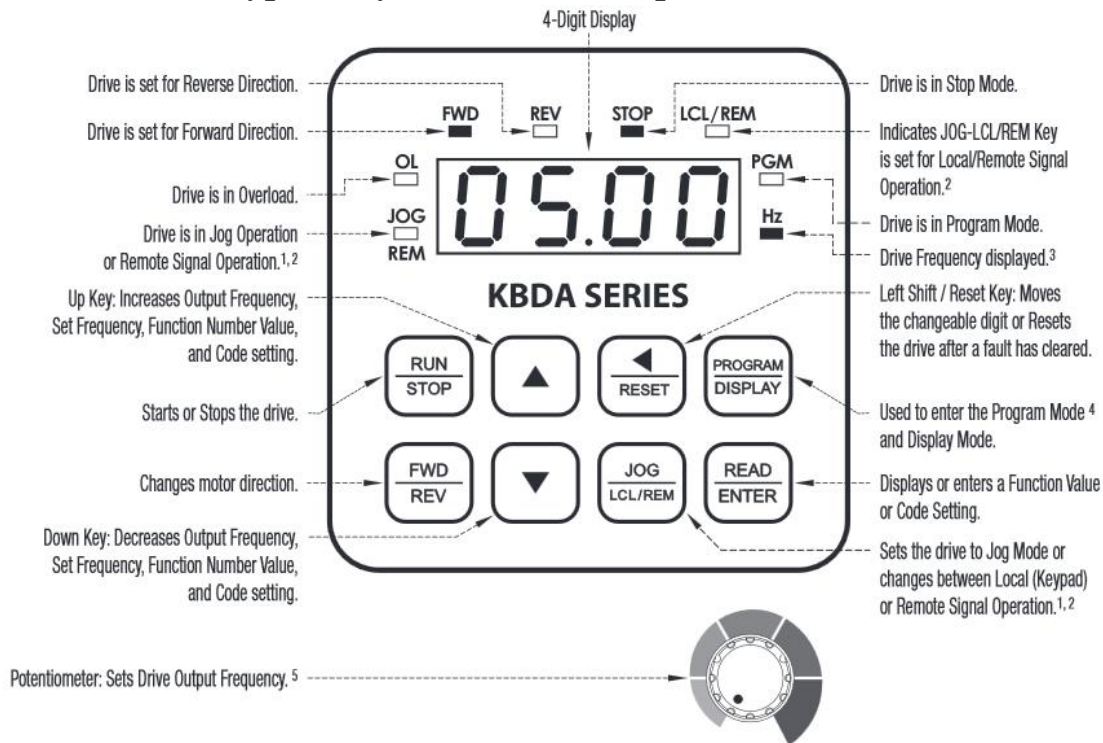

Modifying Default Parameters

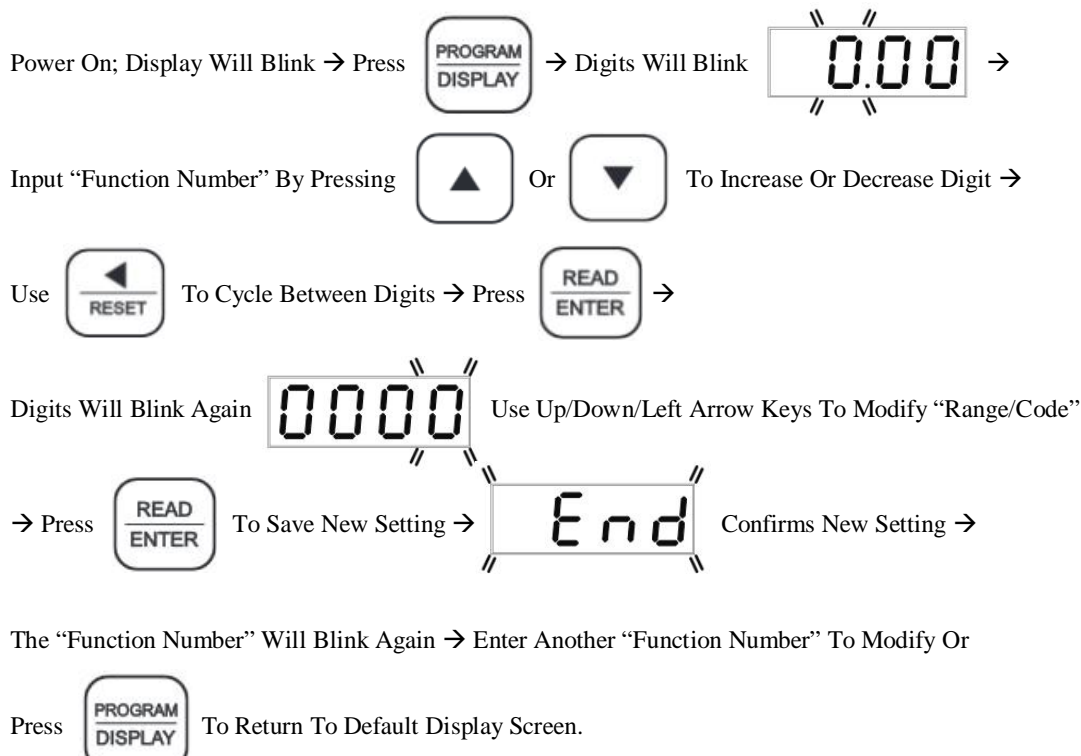

FUNCTION NUMBER	DESCRIPTION	RANGE / CODE
0.01	Motor Nameplate Current (Amps)	1.69
1.01	Forward/Reverse Control	0002: Reverse Disabled
2.00	Frequency Control	0001: Built In Potentiometer
3.01	Lower Frequency Limit (Hz)	10
3.03	Acceleration Time (Seconds)	3
3.04	Deceleration Time (Seconds)	3
3.13	Jog Frequency (Hz)	10
4.00	Display Mode	0002: Custom Units, RPM
4.01	Custom Units Significant Digits (RPM)	3500
4.03	Display in Stop Mode	0001: "StoP"

7. Operating instructions

7.1 Starting and Stopping

Although all bearings are lubricated before shipment, all bearings should be checked for adequate lubrication prior to initial operation, inspection, and regular use. The machine should be allowed to idle for a brief operation and inspection period of approximately 10 to 15 minutes, prior to introducing feed material.

CAUTION

It is extremely important that the **MACHINE NOT BE STARTED WITH ANY MATERIAL IN THE TANKS**. Prior to daily startup and operation, the machine should be run at the beginning of the day for at least (2) two minutes before feeding any material.

7.2 Alternate Operations

USE OF MACHINE AS AN AGITATOR

The flotation machine is easily converted to an agitator by following the instructions in Section 8 (**Care / Maintenance & Alternative Setups**). The lifting mechanism can be positioned at any desired height for optimum agitation conditions, depending on the tank used and the material being agitated. Also, operating speed should be varied to achieve the most desirable agitating condition.

USE OF MACHINE AS AN ATTRITION SCRUBBER

The flotation machine is easily converted to an attrition scrubber by following the instructions in Section 8 (**Care / Maintenance & Alternative Setups**). The opposed propellers of different blade pitch provide maximum movement and rubbing of the mineral particles. The attrition tank is equipped with a cover to prevent splashing or spillage due to violent agitation of the machine. High pulp densities in the order of 70 to 75 percent solids at an approximate speed of 800 rpm are required for efficient scrubbing.

8. Care / Maintenance & Alternate Setups

The proper lubrication of Ore Dressing and Process Equipment is an important factor in obtaining good performance and long service. Heavy loads, shocks, and jars are typical of dressing and processing operations; therefore, lubricants designed to withstand these conditions are essential to assure maximum efficiency.

This manual is offered on the basis of careful scientific selection and proven suitability in service. A minimum number of lubricants will provide good dependable lubrication to fill the various requirements. The D12 Flotation machine bearings are packed with Lucas Oil Products "Red N Tacky" #2 Grease from the factory. It is a multi-purpose lithium complex grease with rust and oxidation inhibitors as well as extreme pressure "EP" additives.

Grit and ore dust are always present, and if allowed to penetrate, may quickly ruin bearings and gears of the best quality. It is desirable to take due precautions in this regard, keeping abrasive material away from points where it may do harm.

Fittings should be wiped clean before the grease gun is applied. Other points of application should be kept free of dirt. The tooth surfaces of open gears should be cleaned before they are re-lubricated because of the grit which collects from the air. To further ensure exclusion of dirt from the lubricants, all drums and containers should preferably be stored in a clean closed room, their covers kept tightly closed when not in use.

Plain sleeve bearings, which are lubricated with grease, should be pumped full to capacity with continued pumping until some of the old grease escapes at the bearing ends. This practice provides a desirable flushing action and also seals the bearing against penetration of foreign matter. The same instructions will apply to antifriction bearings (ball or roller), where excess grease within the housing is free to escape. If there is any doubt about this point, remove the grease fitting or filler plug and let the bearing run until the excess lubricant has been eliminated.

Sealed bearings, where grease cannot readily escape, will usually require minimal application, at infrequent intervals. Keep in mind that regular intervals of application are essential to successful results. Operating conditions will largely determine just how often each part must be serviced, but generally speaking, frequent application of lubricants in small quantity is preferred over heavy dosages at longer or irregular intervals.

Where the lubricant is continuously reused, such as enclosed worm gear units, etc., the oil should be changed regularly to maintain the necessary purity; freedom from moisture and abrasive matter. Proper intervals for changing oil will depend upon the amount and severity of service, in no case should the intervals exceed one year.

8.1 Safety Measures

WARNING

Before any work is started, check that the motor is disconnected from the mains or switched off and locked--so that it cannot be started inadvertently.

WARNING

Freely rotating shaft! When working on or in the vicinity of the shaft with the machine in operation, make sure that all personal equipment is arranged so that it cannot fasten in the rotating parts. Work with care and exercise good judgment!

Follow all local health and safety instructions:

- Use approved lifting equipment.
- Fence off the area around the workplace so that unauthorized persons will not be injured.

8.2 Suspended Mechanism Spring Adjustment

If the suspended mechanism should become hard to raise or lower, adjust the spring tension as follows:

- a.) Lower mechanism as far as it will go, turn hand crank until the hole in the side of the spring housing cover lines up with the hole in the hand crank shaft; then insert a nail or pin through these holes.
- b.) Remove the four cap screws attaching the spring housing cover to the machine.
- c.) Turn hand crank counterclockwise 1/4 to 1/2 turn; install and tighten the cap screws removed in step b.
- d.) Remove nail or pin installed in step a; raise and lower mechanism, and check for ease of movement. If mechanism is still hard to operate, repeat steps a through d until corrected.

8.3 Impeller, Diffuser, and Fluidizer Replacement

Replace the impeller, diffuser, and fluidizer as follows:

- a.) Disconnect electrical cable from power source.
- b.) Raise mechanism to its uppermost position.
- c.) Hold belt drive, and turn impeller (right hand thread) clockwise until removed from shaft.

NOTE

- Perform step d only if fluidizer is installed on machine. Fluidizer can be removed from standpipe after diffuser is removed in step e.

- d.) Remove rubber bands attaching fluidizer to diffuser.
- e.) Hold standpipe and turn diffuser (left hand thread) counterclockwise until removed from standpipe.

NOTE

- Perform step f only if fluidizer is to be installed on machine. Fluidizer has an inside bevel on one end so it will fit firmly against slope of diffuser. This bevel must face down.

- f.) Slip fluidizer on standpipe with beveled end facing down.
- g.) Install diffuser on standpipe and tighten hand tight.
- h.) Install impeller on shaft and tighten hand tight.

NOTE

- Perform step i only if fluidizer is installed on machine.

- i.) Attach fluidizer to diffuser with three rubber bands as follows:

1. Pass one end of each rubber band down through fluidizer.
2. Loop these ends over three separate diffuser blades at approximately equal distances around diffuser.
3. Pull loose ends of rubber bands down and over outside of fluidizer and loop over the same diffuser blades used in step 2.

8.4 Converting Machine to Agitator

Convert the machine to an agitator as follows:

NOTE

- Machine can be converted only if the optional kit is furnished with machine.
- a.) Disconnect electrical cable from power source.
 - b.) Raise mechanism to its uppermost position.
 - c.) Hold belt drive and turn impeller (right hand thread) clockwise until removed from shaft.

NOTE

- If standpipe will not unscrew by hand, remove air valve and pipe plug from standpipe and insert two 1/8-inch pipe nipples in their place. Use these nipples to remove standpipe. Do not use a pipe wrench!
- d.) Turn standpipe (left hand thread) counterclockwise until removed from machine.
 - e.) Install lower spindle bearing cap (from kit) in place of standpipe.
 - f.) Install single agitator propeller (from kit) on end of shaft.

8.5 Converting Machine to Attrition Scrubber

Convert the machine to an attrition scrubber following instructions in “Converting Machine to Agitator” except in step f, the one-piece double attrition propeller is installed on the shaft, instead of the single agitator propeller.

8.6 Bearing Replacement

REMOVAL

Remove bearings as follows:

- a.) Disconnect electrical cable from power source.
- b.) Raise mechanism to its uppermost position.
- c.) Turn speed control knob to its uppermost position in drive guard.

NOTE

- Perform step d only if tachometer is furnished with machine.
- d.) Loosen set screw on side of tachometer adapter base to free flexible coupling.
 - e.) Remove hex nut attaching drive guard to machine and remove drive guard.
 - f.) Loosen set screws attaching motor bracket to machine, slide motor toward machine, and remove belt.
 - g.) Hold shaft and turn impeller (right hand thread) clockwise until removed from shaft.

NOTE

- If standpipe will not unscrew by hand, remove air valve and pipe plug from standpipe and insert two 1/8-inch pipe nipples in their place. Use these nipples to remove standpipe. Do not use a pipe wrench!
- h.) Turn standpipe (left hand thread) counterclockwise until removed from machine.
 - i.) Remove upper spindle bearing cap (right hand thread).
 - j.) Place a piece of hardwood on the top of the shaft and carefully hammer the shaft downward to free it from the bearings, then remove shaft from machine.
 - k.) Remove bearings and inspect for damage or excessive wear. Replace as required.

INSTALLATION

Install bearings as follows:

- a.) Thoroughly clean all parts to remove old grease, dirt etc.

NOTE

- Bearings are attached to shaft by a firm pressure fit.
- b.) Place lower bearing on shaft and insert shaft and bearing up into the spindle bearing housing.
 - c.) Pack with grease (Lucas Oil "Red N Tacky" #2 grease or equivalent).
 - d.) Install standpipe on machine and tighten hand tight.
 - e.) Install upper bearing on shaft. Insure bearing is tight against shaft shoulder.

- f.) Pack with grease and install spacers and upper spindle bearing cap. Tighten cap hand tight.
- g.) Check shaft for end play or if it is too tight. If there is end play, or shaft is too tight, remove or add spacers as required until there is no end play and shaft is adequately tight.
- h.) Install belt and adjust tension by sliding motor away from machine. Tighten set screws attaching motor bracket to machine when proper tension of belt is obtained.
- i.) Install drive guard on machine with hex nut.

NOTE

- Perform step j only if tachometer is furnished with machine.

- j.) Tighten set screw on side of tachometer base to secure flexible coupling.

LUBRICATION

The bearings on the machine are sealed bearings, requiring no periodic lubrication. After prolonged use, it may be necessary to repack the bearings; repack bearings in accordance with the instructions listed earlier.

9. Spare Parts

9.1 Recommended Spare Parts Stock


We recommend an ample supply of parts be kept on hand to prevent unnecessary downtime and loss of production.

Following is a list of parts and quantities recommended by Metso to be stocked as spares for the flotation machine:

Description	Qty	Part #	SAP #
IMPELLER	1	201588	777011435
HOOD	1	500333	777011409
IMPELLER	1	200563	777011433
HOOD	1	500390	777011431
BEARING	2	524615 CONE;	777011378
		524663 CUP	777011384
V-BELT (legacy)	1	520359	777011450

9.2 Spare Parts Drawing

See below drawings D-28179, pages 1 and 2 for general machine assembly (legacy).

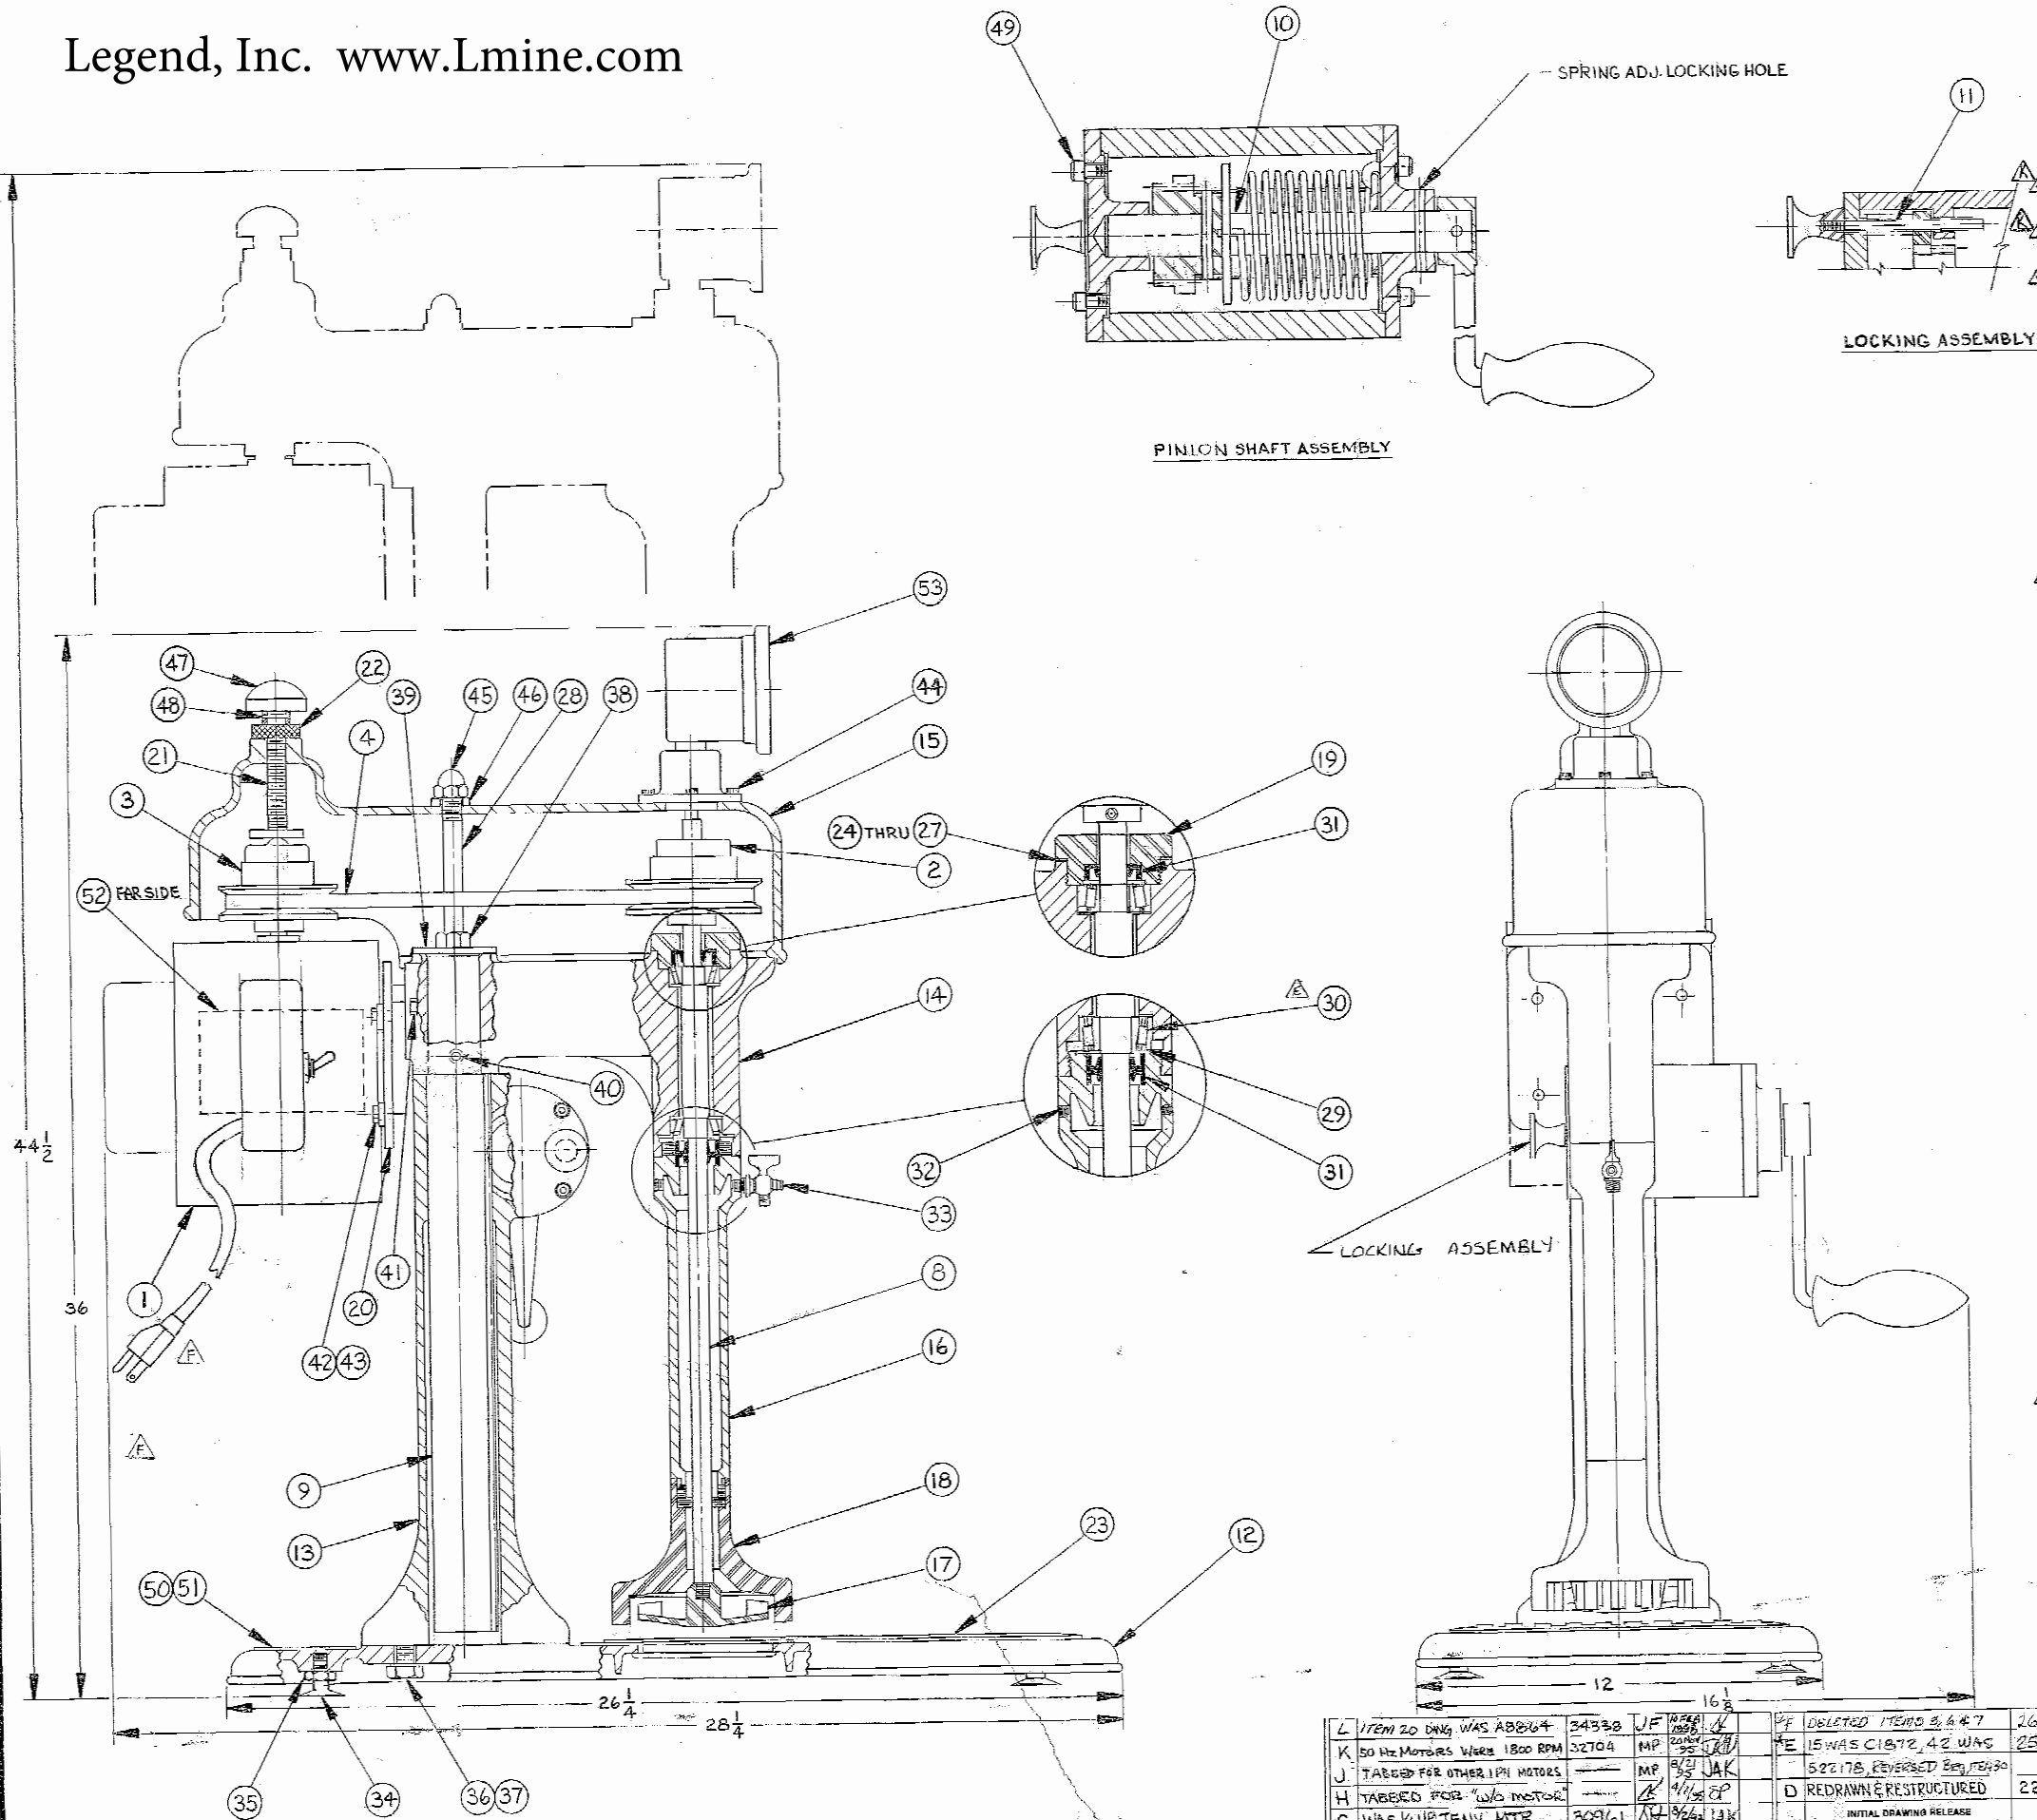

NOTE:
BILL OF MATERIALS CONTINUED ON SHEET 2.

1	574591	MOTOR, 1/2 HP, 230V, 1 PH, 50 Hz	A-519380
1	574590	MOTOR, 1/2 HP, 115V, 1 PH, 50 Hz	A-519380
1	574589	MOTOR, 1/2 HP, 230V, 1 PH, 60 Hz	A-519380
1	574588	MOTOR, 1/2 HP, 115V, 1 PH, 60 Hz	A-519380
53	500363	KIT, TACHOMETER	B-23013
52	105619	LABEL, WARNING	B-17315
51	508203	NAMEPLATE	A-14990
50	522884	SCREW, DRIVE #2 X 1/4 LG 18-8 SST	
49	533372	SCREW, SHC 1/4-20 UNC X 1/2 LG CHR PL	
48	523651	PIN, SPRING 1/8 X 3/4 LG	
47	500369	KNOB, ADJ 3/8 BORE CHR PL	A-500369
46	522997	WASHER, 1/2 PLAIN 316 SST	
45	523614	NUT, ACORN 1/2-13 UNC CHR PL	
44	101610	SCREW, SHC #10-24 UNC X 1/2 LG CHR PL	
43	522962	WASHER, 5/16	
42	522280	SCREW, HHC 5/16-18 UNC X 1/2 LG GR 5	
41	523081	SCREW, SHS #10-24 UNC X 3/4 LG	
40	523084	SCREW, SHS 3/8-16 UNC X 1/2 LG CUP PT	
39	500382	WASHER, DRIVE GUARD	A-15714
38	522657	NUT, HEX 1/2-13 UNC	
37	522928	LOCKWASHER, SPRING 1/2	
36	522192	SCREW, HHC 1/2-13 UNC X 1/4 LG GR 5	
35	522841	NUT, JAM 3/8-16 UNC	
34	523791	BOLT, ELEVATOR 3/8-16 UNC X 3/4	A-529642
33	529642	PETCOCK	A-529642
32	521564	PLUG, PIPE CSK 1/8 NPT	A-520857
31	520927	SEAL, OIL	A-524663
30	524663	CUP, BEARING	A-524615
29	524615	CONE, BEARING	A-8862
28	500352	STUD, DRIVE GUARD	A-101565
27	101565	SHIM, .020	A-101564
26	101564	SHIM, .010	A-101563
25	101563	SHIM, .005	A-101562
24	101562	SHIM, .003	G-2035
23	500372	PAD, TANK BASE	A-10314
22	500357	LOCKNUT, CONTROL	A-8863
21	500351	BAR, ADJUSTABLE CONTROL	B-1362
20	532994	PLATE, MOTOR	A-8875
19	532995	CAP, SPINDLE BEARING	B-17649
18	500390	HOOD	B-18945
17	200360	IMPELLER, OPEN	B-7330
16	500350	STANDPIPE	C-36641
15	532993	GUARD, DRIVE	B-7329
14	532996	HOUSING, SPINDLE BEARING	F-4608
13	532998	SUPPORT, SPINDLE BEARING	C-1873
12	500318	BASE	A-8865
11	500360	ASSY, PINION LOCKING SHAFT	B-16424
10	500362	ASSY, PINION SHAFT	A-9022
9	500247	ASSY, SUPPORTING SHAFT	A-9023
8	500393	SHAFT, IMPELLER	
7			
6			
5			
4	520359	V-BELT	
3	519802	SHEAVE, 3 3/8 O.D.	
2	519823	SHEAVE, 4" O.D.	
1	519380	MOTOR, 1/2 HP, 115V, 1 PH, 60 Hz	A-519380

ITEM 20 DNG WAS AB8864

50 Hz Motors Were 1800 RPM

TABED FOR OTHER 1PH MOTORS

TABED FOR "W/O MOTOR"

WAS 1/4 HP TENV, MTR

34338

32704

30961

UF

MP

MP

MP

MP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

DELETED ITEM 3, 4 & 7

IS WAS C1872, 42 WAS

522178, REVERSED BY JEN30

REDRAWN & RESTRUCTURED

INITIAL DRAWING RELEASE

26700

25814

22220

3R

ALC

DJR

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

1/2 HP

SCALE 3/8" = 1"

DWN D. J. ROSS

CHKD D. C. STINE

APVD

APVD

DATE 8-11-81

DATE 8-11-81

DATE 8-11-81

DATE 8-11-81

DATE 8-11-81

ASSEMBLY PART NO.

DATE

DATE

DATE

DATE

574594

574593

574592

574591

574590

574589

574588

574587

574586

574585

574584

574583

574582

574581

574580

574579

574578

574577

574576

574575

574574

574573

574572

574571

574570

574569

574568

574567

574566

574565

574564

574563

574562

574561

574560

574559

574558

574557

574556

574555

574554

574553

574552

574551

574550

574549

574548

574547

574546

574545

574544

574543

574542

574541

574540

574539

574538

574537

574536

574535

574534

574533

574532

574531

574530

574529

574528

574527

574526

574525

574524

574523

574522

574521

574520

574519

574518

574517

574516

574515

574514

574513

574512

574511

574510

574509

574508

574507

574506

574505

574504

574503

574502

574501

574500

574499

574498

574497

574496

574495

574494

574493

574492

574491

574490

574489

574488

574487

574486

574485

574484

574483

574482

574481

574480

574479

574478

574477

574476

574475

574474

574473

574472

574471

574470

574469

574468

574467

574466

574465

574464

574463

574462

574461

574460

574459

574458

574457

574456

574455

574454

574453

574452

574451

574450

574449

574448

574447

574446

574445

574444

574443

574442

574441

574440

574439

574438

574437

574436

574435

574434

574433

574432

574431

574430

574429

574428

574427

574426

574425

574424

574423

574422

574421

574420

574419

574418

574417

574416

574415

574414

574413

574412

574411

574410

574409

574408

574407

574406

574405

574404

574403

574402

574401

574400

574399

574398

574397

574396

574395

574394

574393

574392

574391

574390

574389

574388

574387

574386

574385

574384

574383

574382

574381

574380

574379

574378

574377

574376

574375

574374

574373

574372

574371

574370

574369

574368

574367

574366

574365

574364

574363

574362

574361

574360

574359

574358

574357

574356

574355

574354

574353

574352

574351

574350

574349

574348

574347

574346

574345

574344

574343

574342

574341

574340

574339

574338

574337

574336

574335

574334

574333

574332

574331

574330

574329

574328

574327

574326

574325

574324

574323

574322

574321

574320

574319

574318

574317

574316

574315

574314

574313

574312

574311

574310

574309

574308

574307

574306

574305

574304

574303

574302

574301

574300

574299

574298

574297

574296

574295

574294

574293

574292

574291

574290

574289

574288

574287

574286

574285

574284

574283

574282

574281

574280

574279

574278

574277

574276

574275

574274

574273

574272

574271

574270

574269

574268

574267

574266

574265

574264

574263

574262

574261

574260

574259

574258

574257

574256

574255

574254

574253

574252

574251

574250

574249

574248

574247

574246

574245

574244

574243

574242

574241

574240

574239

574238

574237

574236

574235

574234

574233

574232

574231

574230

574229

574228

574227

574226

574225

574224

574223

574222

574221

574220

574219

574218

574217

574216

574215

574214

574213

574212

574211

574210

574209

574208

574207

574206

574205

574204

574203

574202

574201

574200

574199

574198

574197

574196

574195

574194

574193

574192

574191

574190

574189

574188

574187

574186

574185

574184

574183

574182

574181

574180

574179

574178

574177

574176

574175

574174

574173

574172

574171

574170

574169

574168

574167

574166

574165

574164

574163

574162

574161

574160

574159

574158

574157

574156

574155

574154

574153

574152

574151

574150

574149

574148

574147

574146

574145

574144

574143

574142

574141

574140

574139

574138

574137

574136

574135

574134

574133

574132

574131

574130

574129

574128

574127

574126

574125

574124

574123

574122

574121

574120

574119

574118

574117

574116

574115

574114

574113

574112

574111

574110

574109

574108

574107

574106

574105

574104

574103

574102

574101

574100

574099

574098

574097

574096

574095

574094

574093

574092

574091

574090

574089

574088

574087

574086

574085

574084

574083

574082

574081

574080

574079

574078

574077

574076

574075

574074

574073

574072

574071

574070

574069

574068

574067

574066

574065

574064

574063

574062

574061

574060

574059

574058

574057

574056

574055

574054

574053

574052

574051

574050

574049

574048

574047

574046

574045

574044

574043

574042

574041

574040

574039

574038

574037

574036

574035

574034

574033

574032

574031

574030

574029

574028

574027

574026

574025

574024

574023

574022

574021

574020

574019

574018

574017

574016

574015

574014

574013

574012

574011

574010

574009

574008

574007

574006

574005

574004

574003

574002

574001

574000

573999

573998

573997

573996

573995

573994

573993

573992

573991

573990

573989

573988

573987

573986

573985

573984

573983

573982

573981

573980

573979

573978

573977

573976

573975

573974

573973

573972

573971

573970

573969

573968

573967

573966

573965

573964

573963

573962

573961

573960

573959

573958

573957

573956

573955

573954

573953

573952

573951

573950

573949

573948

573947

573946

573945

573944

573943

573942

573941

573940

573939

573938

573937

573936

573935

573934

573933

573932

573931

573930

573929

573928

573927

573926

573925

573924

573923

573922

573921

573920

573919

573918

573917

573916

573915

573914

573913

573912

573911

573910

573909

573908

573907

573906

573905

573904

573903

573902

573901

573900

573899

573898

573897

573896

573895

573894

573893

573892

573891

573890

573889

573888

573887

573886

573885

573884

573883

573882

573881

573880

573879

<

This is a technical line drawing of a vertical mechanical device, possibly a hand-operated pump or press. The device features a tall, slender central column. At the top, there is a circular component, likely a pressure gauge or a viewing window. A horizontal flange or support structure is located below the top component. The main body of the column has two small circular features, possibly rivets or mounting points. On the right side, there is a rectangular component with a handle attached to it, suggesting a manual operating mechanism. The base of the device is wider and includes a series of vertical slots or a grate. A leader line points to a small, T-shaped component on the left side of the main column.

2 APPROXIMATE MACHINE WEIGHT : 200 LBS

LAB FLOTATION MACH



SVEDALA
PUMPS & PROCESS
SVEDALA INDUSTRIES, INC.
COLORADO SPRINGS, COLORADO U.S.A.

D-28179	RF M
---------	---------

PAGE 2 OF 2

SHIELD

[illegible]